TAWA

(GB)

Safety notes and notes for use: Mobile LED-lamp

TECHNICAL SPECIFICATIONS

Bulb: LED Luminous Flux: 50 Lumen Output: 7 W Protection Class: III IP Code: IP54 Light Colour: 2700-6500 K Ra/CRI 83

Voltage: DC 3,7 V Input: 5V/DC 2 A

Dimensions: H 51 cm, Ø 25 cm Burning Period: 5-25 h



Read the operating instructions carefully before using the lamp for the first time. Please keep these instructions for future reference. If you pass the lamp on to third parties, be sure to include these instructions.

GENERAL

These safety and usage instructions are part of the mobile led-lamp setup (hereinafter referred to as the 'lamp'). It contains important information about commissioning and handling.

Read the operating instructions carefully before using the lamp, especially the safety instructions. Failure to follow these instructions may result in serious injury or damage to the lamp.


The safety and usage instructions are based on the standards and rules that are valid in the European Union. In addition, follow country-specific guidelines and laws abroad

This lamp contains built-in LED bulbs.

The LED bulbs cannot be changed in the lamp. If the LED bulbs are defective, the entire lamp must be replaced.

blomus GmbH | Zur Hubertushalle 4 | 59846 Sundern | Germany

UKCE (IP54)

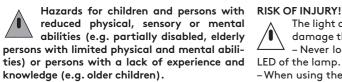

- -This lamp can be used by children aged eight and over, and by persons with reduced physical, sensory or mental abilities or a lack of experience and knowledge, if they have been supervised or instructed in the safe use of the lamp and understand the resulting hazards. Children are not allowed to play with the lamp. Cleaning and maintenance must not be performed by children level, dry, heat-resistant and sufficiently stable without supervision.
- Keep children younger than eight years away from the lamp and the connection cable.
- Do not leave the lamp unattended when operating it.
- Do not let children play with the packaging film. Children can get caught up in it and suffocate when playing.

RISK OF AN EXPLOSION AND FIRE!

Improper handling of the lamp can cause an explosion or fire.

- Keep the lamp away from water, other liquids, open fire and hot surfaces. - Do not cover the lamp or the mains plug with
- objects or clothing... - Keep a distance of at least 10 cm from easily flammable materials.
- Do not expose the lamp to excessive heat, such as direct sunlight, fire etc.

This product contains a light source

of energy efficiency class G.

Lifetime of LED: > 20.000 h

The light of the LED is very bright and can - Never look directly into the illuminated LED of the lamp.

-When using the lamp, take care not to shine it into the eyes of people or other living creatures. quickly damaged.

RISK OF DAMAGE!

Improper handling of the lamp can result in damage to the lamp.

-Install the lamp on an easily accessible, surface

Do not place the lamp on the edge of the sur-

- Do not place the lamp on or near hot surfaces (cookers etc.).
- Do not bring the lamp or mains cable into contact with hot parts.
- Do not expose the lamp to weather conditions (rain etc.).
- Do not use the lamp if it is damaged, e.g. cracks, fissures or deformation. If this happens, dispose of the lamp properly.
- -The light source of this lamp cannot be replaced. When the light source reaches the end of its 5. When the lamp is fully charged, the charging life, replace the entire lamp.

USING THE LAMP FOR THE FIRST TIME

damage the eyes if it is looked at directly. Check the lamp and the scope of delivery

Risk of damage! If you open the packaging carelessly with a sharp knife or other pointed object, the lamp can be

- When opening, proceed with caution
- 1. Remove the lamp from the packaging.
- 2. Check that the scope of delivery is complete.
- 3. Check whether the lamp is damaged. If this is the case, do not use the lamp and contact the manufacturer.

Charging the lamp

Before using for the first time, charge the lamp fully. It is not possible to use the lamp during the charging process.

1. For charging, place the lamp on a dry, horizontal surface.

- 2. Fully unwind the USB charging cable.
- 3. Insert the USB plug into the charging socket.
- 4. Insert the USB plug into a USB power source (e.g. computer, USB charger). Whilst the light is being charged, the charging indicator light turns
- indicator light turns green. You can use the lamp.

OPERATION

The lamp offers three brightness levels (20 %, 50 % and 100 %).

- To switch on the lamp, push the control element on the top of the lamp head. The LEDs light

up with the brightness level 20 %.

and not for commercial applications.

EXPLANATION OF SYMBOLS

pean Economic Area.

SAFETY

Intended use

a children's tov.

CE Declaration of Conformity - Products

complies with protection class III.

lamp. The lamp is splash-proof.

sult in minor or moderate injury.

products sold within Great Britain.

marked with this symbol comply with all

This symbol shows the IP code of the

applicable Community legislation of the Euro- may lead to electric shock.

This symbol indicates that the lamp rating plate.

- push the button several times. The LEDs light up cleaning objects such as knives, hard scrapers This ensures that waste products are properly rein the three brightness levels.
- -In order to switch the lamp off, push the button These can damage the surfaces.

The lamp can also be controlled via the blomus

- Download and install the blomus app on your water and soap in order to clean the lamp. smartphone or tablet PC.
- Hold the control element on the top of the lamp for approx. 3 seconds until the light ring starts to
- flash. The Bluetooth function is now activated. STORAGE - Open the app on your smartphone or tablet PC. Add the light as a device.
- You can now control the light via the app or Protect the lamp from direct sunlight.
- Please refer to the additional information in the between 5 °C and 20 °C (room temperature). illustrated operating instructions which are sup-

plied.

CLEANING

Risk of a short circuit!

Water or other liquids that have entered the housina may cause a short circuit. - Never immerse the lamp in water or other li-

- quids. - Make sure that no water or other liquids get
- into the housing.

RISK OF DAMAGE!

Improper handling of the lamp can result in damage to it.

solvent, abrasive cleaning agents, brushes with ces separately from household waste, e.g. at a

RISK OF AN ELECTRIC SHOCK!

This symbol indicates a hazard with a and warranty claims are excluded in the event

medium level of risk which, if not avoi- of repairs or modifications performed by your-

ded, can result in death or serious injury. self, improper connection or incorrect operation.

This symbol indicates a hazard with a low vice data may be used for repairs. This lamp conlevel of risk which, if not avoided, may re- tains electrical and mechanical parts which are

water or other liquids.

Certification mark that idicates confor- switch or a separate remote control system. mity with the applicable requirements for -Do not immerse the lamp, power cord or plug in

The lamp is exclusively designed for use indoors -Never use the mains cable as a carrying handle.

and outdoors in temperatures ranging between -Keep the lamp and power cord away from naked

ting instructions: Any other form of use is consi- - Do not bend the mains cable or place it over

property or even personal injury. The lamp is not - Never use the lamp in damp rooms or in the

The manufacturer or dealer accepts no liability - Never store the lamp so that it can fall into a

rain.

0 °C and 40 °C. It is exclusively for private use flames and hot surfaces.

Only use the lamp as described in these opera- a trip hazard.

dered improper use and may result in damage to sharp edges.

for damage caused by improper or incorrect use bathtub or sink.

- Do not operate the lamp if there is visible da-

- Do not open the housing. Instead leave the re-

pair for qualified staff to carry out. Contact a

specialist workshop for this purpose. Liability

- Only parts that correspond to the original de-

- Do not operate the lamp with a external time

- Never touch the mains plug with wet hands.

the power cord. Always touch the mains plug.

- Never pull the mains plug out of the socket by

- Lay the power cord so that it does not become

essential for protection against hazards.

mage or if the power cord or plug is defective.

- In order to gradually increase the brightness, metal/nylon bristles or sharp-edged/metallic collection point organised by the local council.

- Never put the lamp in the dishwasher. It would destroy the lamp. 1. Allow the lamp to cool down completely.
- 2. Use a soft cloth moistened with lukewarm
- 3. Allow all parts to dry completely.

- -Always store the lamp in a dry place.
- Store the lamp out of the reach of children Store it securely closed at a storage temperature

DISPOSAL

Disposal of the packaging

Dispose of the packaging according to type. Put card and cardboard in with the waste paper. Put film into the recyclable waste collection.

Disposal of the lamp

(Applicable in the European Union and other European countries with systems for the separate collection of recyclables)

Old appliances should not be disposed of with household waste!

If the lamp can no longer be used, the consu-- Do not use cleaning agents containing mer is legally obliged to dispose of old applian-

- Never reach for an electrical appliance if it has fallen into water.

Incorrect electrical installation, excessively high mains voltage as well as damage and improper handling of the lamp

– If you do not use the lamp, if you clean it or if – Only connect the lamp if the mains voltage of a fault occurs, always switch the lamp off and

- Make sure that children do not insert objects into the lamp.
- the socket corresponds to the information on the unplug it from the mains.

cycled and that negative environmental effects

are avoided. Therefore, electrical appliances are

Batteries should not be disposed of with

they contain harmful substances, at a

collection point in your neighbourhood or hand

them over to a trader so that they can be dis-

posed of in an environmentally-friendly manner.

Please dispose of the lamp in full (with the bat-

tery) at your local collection point. Please ensure

Zur Hubertushalle 4 | 59846 Sundern | Germany

E-mail: kundenservice@blomus.com

Telephone: +49 (0) 2933 831-130

that the battery has been discharged!

CONTACT INFORMATION

blomus GmbH

www.blomus.com

As a consumer, you are legally obliged to dispose of all batteries, whether or not

marked with the symbol that is shown here.

household waste!

