


blomus

NOCA

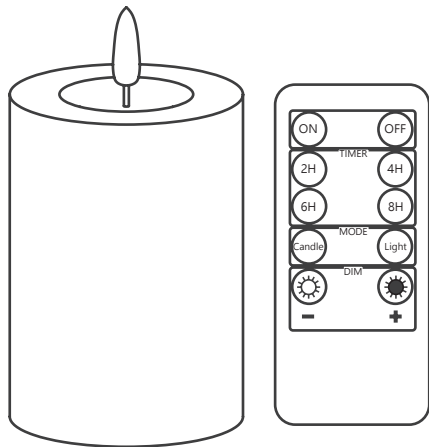

EN:
INstruction Manual
LED Candles, Remote Control



This product contains a light source



Please read the operating instructions carefully before using the mobile LED candles or the remote control. Please keep this manual for future reference.


GENERAL

These operating instructions belong to various LED candles (Art no: 67028-67039), as well as the remote control (Art no 67040) cm (hereinafter referred to only as „light“) that can be purchased with them. It contains important information on commissioning and handling. Read the operating instructions carefully, especially the safety instructions, before using the lamp. Failure to comply with these operating instructions may result in serious injury or damage to the lamp.

SCOPE OF DELIVERY

67028-67039: LED candle, instruction manual
Additionally needed: Battery type AA, 1.5 V
67040: Remote control, instruction manual
Additionally needed: 1x button cell CR2025

EXPLANATION OF SYMBOLS

 Declaration of Conformity - Products marked with this symbol comply with all applicable Community regulations of the European Economic Area.



This signal symbol indicates a hazard with a medium level of risk which, if not avoided, may result in serious injury.



The LED candle is protected against splashing water.

INTENDED USE

The candle is designed exclusively for decorative lighting. It is intended for private use only and is not suitable for commercial use. Use the candle only as described in these instructions for use. Any other use is considered improper and may result in property damage or even personal injury. The candle is not a child's toy. The manufacturer or dealer accepts no liability for damage caused by improper or incorrect use.

General safety instructions

- these operating instructions are intended to familiarize you with the operation of this product. Keep these instructions in a safe place so that you can refer to them so that you can access them at any



| | LED Candle Size S | LED Candle Size M | LED Candle Size L | LED Candle Size XL | Remote Control |
|--------------------|---------------------|---------------------|---------------------|---------------------|----------------------------|
| Art. No. | 67028, 67029, 67030 | 67031, 67032, 67033 | 67034, 67035, 67036 | 67037, 67038, 67039 | 67040 |
| Size | H 10 cm, Ø 7 cm | H 12.5 cm, Ø 7 cm | H 15 cm, Ø 7 cm | H 25 cm, Ø 10 cm | H 0,7 cm, B 4 cm, T 8,5 cm |
| Lumen | 40 LM | 40 LM | 40 LM | 60 LM | |
| Output | 0.02 W | 0.02 W | 0.02 W | 0.02 W | 0.02 W |
| Volt | 3 V | 3 V | 3 V | 4.5 V | 3 V |
| IP Code | IP44 | IP44 | IP44 | IP44 | / |
| Light Colour | warm white | warm white | warm white | warm white | / |
| Kelvin | 2700-3200k | 2700-3200k | 2700-3200k | 2700-3200k | |
| Lifetime LED | 100000hours | 100000hours | 100000hours | 100000hours | |
| Burning time 20% | 450 | 450 | 450 | 400 | |
| Burning Time 50% | 350 | 350 | 350 | 300 | |
| Burning Time 100% | 200 | 200 | 200 | 160 | |
| Required Batteries | 2AA | 2AA | 2AA | 2AA | CR2025 |

time. Pass them on to subsequent users.

- This product can be used by children aged from eight years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved.
- Please observe the safety instructions when using the product.
- Conversion or modification of the product impairs product safety.



Caution: Risk of injury!

- Never open the product without authorization, except to change the battery. Never carry out repairs yourself!
- Handle the product with care. It can be damaged by shocks, impacts or falling from even a low height.
- Keep the product away from moisture and extreme heat.
- Never immerse the product in water or

other liquids.

- Remove the batteries from the product if you are not going to use it for a long time.
- Do not expose the product to temperatures above 60°C.
- Keep the product away from direct sunlight.
- The batteries must not be changed by children.
- Technical changes and errors excepted!

FIRST USE

INSERT / CHANGE BATTERIES IN CANDLE

1. Open the battery compartment by turning the bottom of the candle counterclockwise. When doing so, observe the marking on the bottom.
2. Set the on/off switch of the candle to the OFF position.
3. Insert new AA batteries into the battery compartment. Pay attention to the polarity indications in the battery compartment.
4. When you are ready to turn on the candle, set the candle's On/Off switch to the ON position.
5. Close the battery compartment again.



Insert/change batteries in remote control

1. Press the grooved part of the battery compartment lock inward and pull out the battery compartment at the same time, observing the drawing on the back of the remote control.
2. Insert a CR2025 button cell battery into the battery compartment. Pay attention to the polarity information on the back of the remote control.
3. Slide the battery compartment back into the remote control as far as it will go. When not in use, set the switch on the bottom of the LED candles to „OFF“ to reduce power consumption and extend battery life. If the LED candles will not be used for a long time, please remove the batteries.

SAFETY INSTRUCTION



- Not suitable for children under 3 years. It is to be avoided that children change the batteries.
- Please do not use battery which is not the same model. And pay attention to the polarity (+/-) when inserting the battery.
- Do not throw the batteries into fire.
- Batteries can be life-threatening if swallowed. Therefore, keep batteries out of reach of children. If a battery has been swallowed, medical assistance must be sought immediately. If a battery has leaked, avoid contact of skin, eyes and mucous membranes with the battery acid. It is corrosive and aggressive. In case of contact with battery acid, immediately rinse the affected areas with plenty of clean water and seek medical attention immediately.
- Incorrect handling of the battery may cause the battery to overheat, burst, leak and/or explode. Do not mix new and old batteries. And never mix alkaline-manganese battery, zinc-carbon battery, and rechargeable battery (NiCd battery) in the same device.

USING LED CANDLES WITHOUT REMOTE CONTROL

- ON/OFF: Slide the switch to ON to turn on the candle. Slide the switch to the OFF position to turn it off.

USE LED CANDLES WITH REMOTE CONTROL

NOTICE:

When controlling, be sure to point the Remote Control towards your candles.
Turning On

1. slide the on/off switch of the candle to the ON position.
2. Press the ON button on the remote control. The LEDs will light up.

Switching off

1. press the OFF button. The LEDs go out.
2. slide the on/off switch of the candle to the OFF position.

Changing the light mode

Set the desired glow mode by pressing the corresponding mode button. Candle imitates the flickering of real candle-light, Light means normal continuous light.

Set brightness level

Set the desired brightness level by pressing the brightness keys. Brightness +
Brightness -

Timer setting

After the set period of time has elapsed, your candles will automatically turn off. The next day, turn on again at the same time you activated the timer the day before. After the time period has elapsed, they will turn off again automatically. then switch off again automatically. The cycle repeats until you press another button on the Remote Control or move the On/Off switch to the OFF position.

NOTE:

Make any desired settings regarding light mode and brightness level before activating the timer.

1. press the timer button on the remote control corresponding to the desired time period OFF. If the command is received, the LED of your candle will blink once. If this does not happen, the timer was not activated. Try again.
3. after the timer expires, your candles will turn off.

4. the timer will activate at the same time every day. Stop the timer function by pressing any button on the remote control.

CLEANING

Danger of short circuit!



Water or other liquids that have penetrated the housing can cause a short circuit.

- Never immerse the candle or remote control in water or other liquids.
- Make sure that no water or other liquids get into the housing.

Risk of damage!



Improper handling of the candle can cause damage to it.

- Do not use aggressive cleaning agents, brushes with metal or nylon bristles, or sharp or metallic cleaning objects such as knives, hard spatulas, etc. cleaning objects such as knives, hard spatulas and the like. These can damage the surfaces.
- Never put the candle or remote control in the dishwasher. You would destroy them by doing so.

STORAGE

All parts must be completely dry before storing.

- Always store the candle and the remote control in a dry place.
- Protect the candle and remote control from direct sunlight.
- Store the candle and the remote control out of reach of children, securely closed and at a storage temperature between 5 °C and 20 °C (room temperature).

DISPOSAL

Dispose of packaging

Dispose of the packaging according to type. Put cardboard and carton in the waste paper collection, foils in the recyclables collection.

Old devices must not be disposed of with household waste!



If the LED candle can no longer be used, every consumer is required by law to dispose of old devices separately from household waste, e.g. at a collection point in his municipality/borough. Dealers are also obliged to take back the equipment free of charge. This ensures that old appliances are

blomus GmbH | Zur Hubertushalle 4 | 59846 Sundern | Germany
www.blomus.com

recycled properly and that negative effects on the environment are avoided. This is why electrical appliances are marked with the symbol shown here.

Batteries and rechargeable batteries must not be disposed of with household waste!



As a consumer, you are required by law to take all batteries and rechargeable batteries, whether they contain harmful substances or not, to a collection point in your municipality/borough or to a retailer, so that they can be disposed of in an environmentally friendly manner. If you have any queries about appropriate collection points, please contact the local authority responsible for disposal. The consumer is also obliged to dispose of the batteries and accumulators separately, the return is free of charge for the customer.

You can also send defective old items to the following address:

blomus GmbH
Brumlingser Weg 5-7 | D - 59872 Meschede

CONTACT INFORMATIONEN

blomus GmbH
Zur Hubertushalle 4 | 59846 Sundern | Germany
www.blomus.com
E-Mail: kundenservice@blomus.com
Phone: +49 (0)2933 831-130

10.2023 | 67028-67040